


Installation Details


Silt Sock Properly Installed

Flow greater than 45° in relation to sock

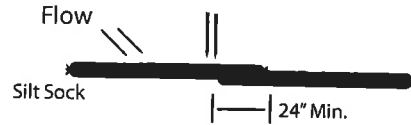

Upstream Silt Sock placed in front of next sock with 24" overlap.

Flow less than 45° in relation to sock

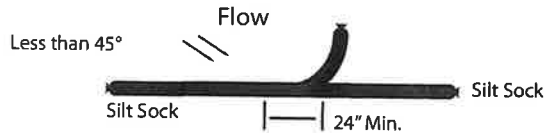


Install another sock or use the upstream sock set 45° to 90° from flow direction with 24" overlap. Curl tail of upstream sock out to slow flow along face of sock. Overlap next sock by 24".

REFERENCE ANGLES



Silt Sock Repair

Silt Sock repair for hole or tear greater than one foot.

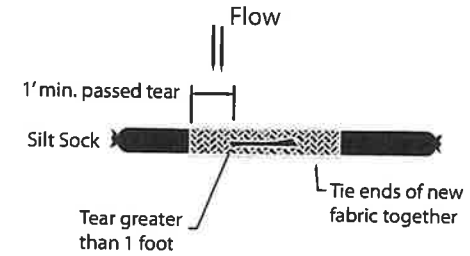

Piece of fabric wrapped around the damaged area and tied on the downstream side.

Silt Sock repair for hole or tear less than one foot.



Damaged areas sewn or tied shut. Rotate sock placing repaired area on downstream side.

Silt Sock

EROSION CONTROL PRODUCTS